

Anchor System

For Rhino Hydraulic Post Drivers



Pneumatic • Hydraulic • Gasoline
Professional Grade Tools

Square Tube Break-Away Anchor System

PLEASE NOTE HPD 3 7/8" (98.4 mm) I.D. Master Chuck (801016) is also required with the following Break-Away Systems and will also require a chuck adapter and a drive cap.

Drives Square Anchors within 2 inches of ground level.
Will drive up to a 2 1/2" square anchor**

Adapter Part Number:

071014 Chuck Adapter for the Square Tube Break-Away Anchor System

Drive Cap Part Numbers for use with above adapter:

- 071004 1 1/4" Drive Cap for the Square Tube Break-Away
- 071005 1 1/2" Drive Cap for the Square Tube Break-Away
- 071006 1 3/4" Drive Cap for the Square Tube Break-Away
- 071007 2" Drive Cap for the Square Tube Break-Away
- 071008 2 1/4" Drive Cap for the Square Tube Break-Away
- 071009 2 1/2" Drive Cap for the Square Tube Break-Away

*Anchor Drive Caps are sold by the outside dimension of the anchor.



Channel Post Break-Away Anchor System

PLEASE NOTE HPD 3 7/8" (98.4 mm) I.D. Master Chuck (801016) is also required with the following Break-Away Systems and will also require a chuck adapter and a drive cap.

Drives Channel Post Anchors within 2 inches of ground level.
Will drive up to a 4 lb/ft Channel Post Anchor.

Adapter Part Number:

070832 Chuck Adapter for the Channel Post Break-Away Anchor System

Drive Cap Part Numbers for use with above adapter:

070836 Drive Cap for the Channel Post Break-Away Anchor System

This Adapter and Drive Cap is to be used for anchors only. The drive cap can present a safety hazard as the drive cap is not attached to the driver or adapter and can fall and cause injury.



A Tradition of Quality and Service Since 1975

Visit rhinotool.com/dealer-locator to find your nearest Rhino® dealer.

© Copyright 2017 Rhino Tool Company, Inc.

 www.rhinotool.com
 866-707-1808