


# Operating Manual

## **Rhino®** **HPP13** **Flex** **Hydraulic** **Powerpack**

**Revised**  
**01.2016**

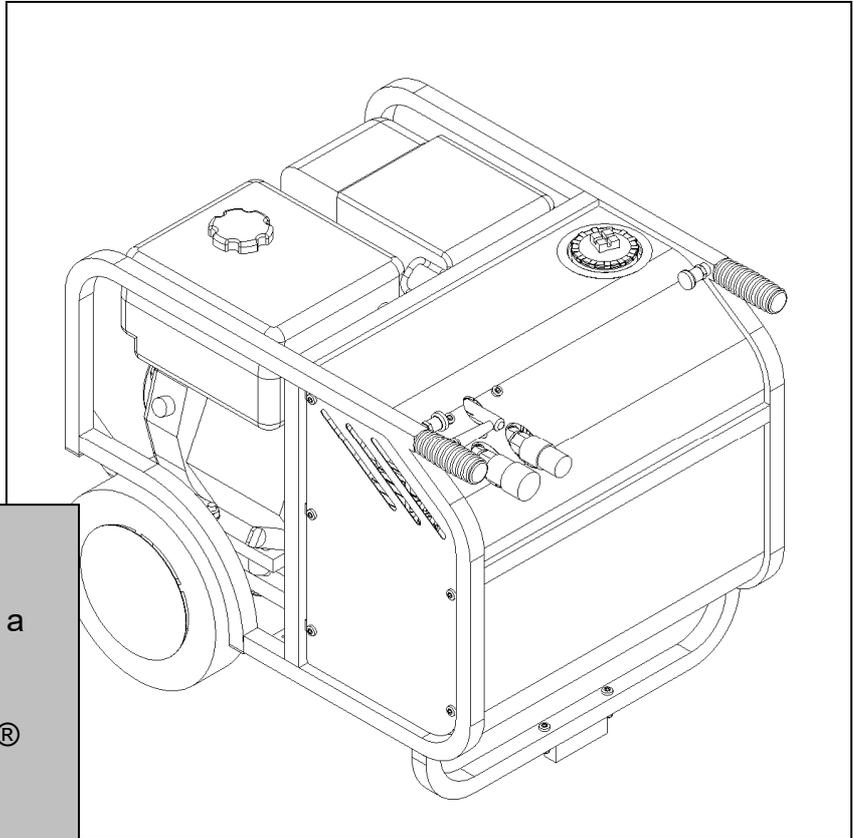

### **Prior to Operation**

We thank you for choosing a Rhino® Power Pack.

Please note that the Rhino® Power Pack is delivered without hydraulic oil, and therefore it must be filled up with hydraulic oil prior to operation.

To ensure smooth operation and long-lasting performance of your new post driver, we recommend you study this operation manual carefully and pay special attention to the

### **Safety and Service Precautions**

We hope you will be satisfied with your new Rhino® Hydraulic Power Pack.

Best Regards,  
Rhino Tool Co.



**Rhino Tool Co. Inc.**  
620 Andrews Ave.  
Kewanee, IL 61443

Tel: 309.853.5555 main  
Tel: 866.707.1808 toll-free  
Fax: 309.856.5905  
info@rhinotool.com  
[www.rhinotool.com](http://www.rhinotool.com)

# Contents

	<b>Page</b>
Safety precautions.....	2
Filling up hydraulic oil .....	2
Technical data.....	3
Starting instructions .....	4
Service, maintenance and hydraulic settings .....	5
Oil types .....	6
Warranty conditions .....	7

## Safety Precautions

1. Always use protective earplugs. The powerpack complies with the EU noise limits, but by daily long-lasting operation there is a risk of hearing defects.
2. Always connect hoses before starting.
3. Never add fuel or oil when the engine is running.
4. In case of non-operation or lack of performance, always turn off the engine.
5. Never start the engine without side covers.
6. Operation of the powerpack without tool connected and with lever at "ON" may cause overheating of the system and damage to the powerpack.
7. When lifting the powerpack from a vehicle, we recommend the use of a crane.
8. The pressure relief valve is set at 2175psi (150 bar) from our plant. Never set it higher.
9. Always use filters with by-pass. The use of filters without by-pass may blow the hydraulic hoses and the filter cover.

## Filling Up Hydraulic Oil

- To fill up with hydraulic oil, loosen the filter cover on top of the powerpack.
- Remove the filter element (see photo), and fill up with oil. When oil is showing at the bottom of the filter unit, there is enough oil in the powerpack.
- Insert the filter element again, replace the cover and the powerpack is ready for use.

*Please note: When connecting new extension hoses, it is necessary to fill up with extra 1/2 gal. (2 litres) of oil. Therefore always top up the powerpack when connecting new extension hoses.*



# Technical Data

## Hydraulics

The Rhino® HPP13 Flex open centre hydraulic powerpack is designed in accordance with the EHTMA categories C and D, which prescribe a minimum performance of 5.25 gpm (20 l.p.m.) at 2000 p.s.i.(138 bar) and 8 g.p.m. (30 l.p.m.) at 2000 p.s.i.(138 bar), respectively.

- With POR system (Power On Request) that automatically reduces the engine r.p.m. if the connected tool is not operated. This version is set to 5.25 g.p.m. (20 l.p.m.) or 8 g.p.m.(30 l.p.m.) from the factory.
- With manual flow adjustment. This powerpack can be set to 5.25 g.p.m. (20 l.p.m.) or 8 g.p.m.(30 l.p.m.) on the front of the powerpack.

The powerpack is mounted with a pressure relief valve to avoid a too high pressure. Furthermore, the very efficient air cooling protects the powerpack against overheating.

<b>Oil flow</b>	5.25 g.p.m. (20 l.p.m.) at 2500 r.p.m. 8 g.p.m.(30 l.p.m.) at 3600 r.p.m.
<b>Working pressure nominal</b>	1725 p.s.i. (120 bar)
<b>Pressure relief valve</b>	Set at 2175 p.s.i. (150 bar)
<b>Pump</b>	Gear pump
<b>Oil temperature</b>	Max. 158° (70° C)
<b>Hydraulic oil tank capacity</b>	Min. 1.5 gal. (6 litres)/max. 2.1 gal. (8 litres)
<b>Petrol tank capacity</b>	1.7 gal. (6.5 litres)
<b>Hydraulic system compl.</b>	2.38 gal. (9 litres)
<b>Filter system (filter element)</b>	25 Micron with by-pass
<b>Engine</b>	Honda GX390QXB7 13 HP (gross power) 4-stroke gas with oil alert system Gas - normal or unleaded Engine oil .3 gal. (1.1 litres)
<b>Guaranteed sound power level <math>L_{WA}</math></b>	101 dB
<b>Sound pressure level 1 m <math>L_{PA}</math></b>	89 dB
<b>Dimensions (LxWxH)</b>	28"x 23.5" x 25.5" (710x595x645 mm)
<b>Weight, without hydraulic oil</b>	179 lb. (81kg)

## Starting Instructions

Please observe the starting instructions on the front of the powerpack.

- Start:**
- Check engine oil level
  - Check hydraulic oil level at sight glass
  - Connect hoses and tool
  - Switch fuel tap to "ON"
  - Activate choke
  - Turn ignition switch to "1"
  - Pull recoil starter
  - Move the lever to "ON"
- Stop:**
- Move the lever to "OFF"
  - Turn off the ignition switch
  - Turn the fuel tap to "OFF"

### Powerpack with adjustable flow:

The desired oil flow can be set on the front of the powerpack. A marking is engraved in the lever.

Turn the lever to the right until the marking is opposite the required flow

The pressure relief valve setting will be the same on all flows.



# Service, Maintenance and Hydraulic Settings

Service/Maintenance	Daily	Weekly	Yearly
Engine oil	Check		1 x replacement
Hydraulic oil	Check		1 x replacement
Hydraulic oil filter *			1 x replacement
Check hoses		(tighten up if needed)	
Air filter			1 x replacement
Fuel filter			1 x replacement

\* Use only filters with by-pass

## Hydraulic Settings

Check the working pressure by means of test equipment. The test equipment must comprise a pressure gauge, a flow meter and a valve for adjustment of pressure.

The pressure relief valve is placed on the right side of the valve block.

1. Connect the test equipment, start the powerpack and move the lever to "ON". Then close the valve - the pressure gauge must show 2175 p.s.i.(150 bar).

Adjust the pressure relief valve by loosening the lock nut and turning the adjustment screw in or out. "In" increases the pressure, and "out" decreases the pressure.

Retighten the lock nut after adjustment.

2. When the pressure relief valve has been adjusted correctly, the working pressure must be set at 1450 p.s.i.(100 bar) by means of the valve on the test equipment. At 1450 p.s.i.(100 bar), the oil flow should be 5.28 (8.0) g.p.m.(20 (30) l. p.m.) power on request.

On the powerpack with POR (Power on Request), the flow is adjusted by loosening the POR (Power on Request) cylinder in the bracket and pushing it to the left (higher flow) or to the right (lower flow).

On the powerpack with adjustable flow, the flow is regulated by adjusting the position of the throttle cable.

If correct pressure/oil flow cannot be achieved by following the above instructions, the powerpack must be re-adjusted. If the pressure/oil flow is then still incorrect, the pump is defect and must be replaced.

## Oil Types

The Rhino® HPP13 Flex Power Pack uses standard hydraulic oil, i.e. all types of mineral oil and biodegradable oil, which comply with the following values:

Recommended viscosity	ISO 32 (20-40 cSt)
Permitted viscosity	ISO 15-1000 (15-1000 cSt)
Viscosity index	Min. 100
Temperature area	-4° to 158°F (-20° to +70° C)



## **General Warranty Conditions & Limitations on Liability**

Rhino Tool Company, Inc. ("Rhino") warrants to the original purchaser, purchasing the Equipment in new condition, in original packaging from an authorized dealer that its Hydraulic Tool(s) will be free from defects in workmanship and materials (the "Limited Warranty"). The Limited Warranty shall survive for twelve (12) months with regard to all other components, excluding the Honda 13 HP engine and Vanguard 18 HP engine for which Rhino provides no warranty and for which the warranty is provided by American Honda Motor Co., Inc and by Briggs and Stratton Corporation respectively and the shall be the sole warranty applicable thereto. This Limited Warranty is non-transferable.

In the event of a warranty claim, the Hydraulic Tool(s) must be returned freight prepaid to Rhino or delivered in person to a Registered Rhino Servicing Dealer within the applicable warranty period with proof of original purchase provided. Rhino's obligation under this Limited Warranty is expressly limited to the repair or replacement, at Rhino's election, of such defective Hydraulic Tool(s), which is proved to be defective upon inspection by a Rhino-certified/authorized technician.

This Limited Warranty does not extend to a Hydraulic Tool(s) which has been subject to misuse, neglect, or accident, nor does it extend to any Hydraulic Tool(s) which has been repaired, altered, or serviced by unauthorized persons. This Limited Warranty does not cover any damage or adjustments required to any Hydraulic Tool(s) if such damage or adjustment is caused by the use of supplies, parts, or attachments not sold or approved by Rhino.

**EXCEPT AS OTHERWISE PROVIDED HEREIN, RHINO DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. UNDER NO CIRCUMSTANCES SHALL RHINO BE LIABLE FOR ANY LOSS OF BUSINESS, REVENUES, OR PROFIT OR OTHER INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OR LOSS ARISING OUT OF ANY DEFECTS IN OR PERFORMANCE OF THE HYDRAULIC TOOL(S), HOWSOEVER CAUSED.**